




TRANQUIL
BLOCK
Mass Loaded Vinyl

Method Statement – Tranquil BLOCK

Product	Tranquil BLOCK
Product Description	Mass Loaded Vinyl for Walls, Ceiling and Flooring applications
Dimensions	L-10/15/20 m, W-1.22 m, Thickness - 1/1.5/2/3mm
Density	1900 kgs/m ³
Accessories (Not included in product)	Product supplied in roll form and no extra accessories are included in this product
Minimum Order Quantity & Multiple	1 Roll and Multiple



● Hand Drill Machine

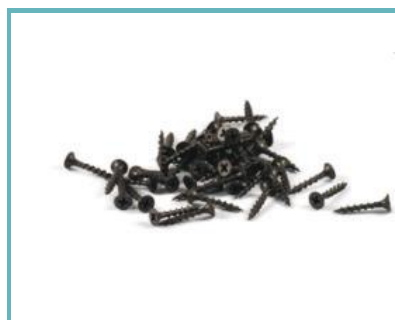

● Self-Tap Screws




● Sealant for Corners

SURFACE PREPARATION

- > Clean the wall/ceiling/floor surface with brush or scrubber to remove loose particles and dust.
- > Tranquil Block can be installed on Ply/Gypsum/ Concrete Surface/Wooden or aluminum battens frame/ etc.
- > Surface check - ensure the surface is free from moisture.
- > If installation is on concrete surface, ensure concrete surface is cured properly, minimum 21 days.
- > Ensure no dampness or leakage on the wall or any substrate, so that product performance is not affected.
- > In case of Tranquil Block application is on plywood or wooden battens, make sure that plywood/ wooden battens are of marine grade so that it doesn't get effected by moisture. Also ensure it is free from dirt, grease or dampness.
- > In case of Tranquil Block application is on aluminum box channels, make sure that size of the channel should be 2 x 1.5 inch minimum.
- > In case of Tranquil Block application is on gypsum board, make sure that gypsum board is of even surface and it is free from dirt, grease or dampness. In such case ensure block is pasted to gypsum and screwed at partition channels.

PRODUCT PREPARATION

- > Tranquil Block will be supplied in roll form and can be installed at site as per the application i.e., for walls/ceiling/floor.
- > No extra accessories are included in this product.

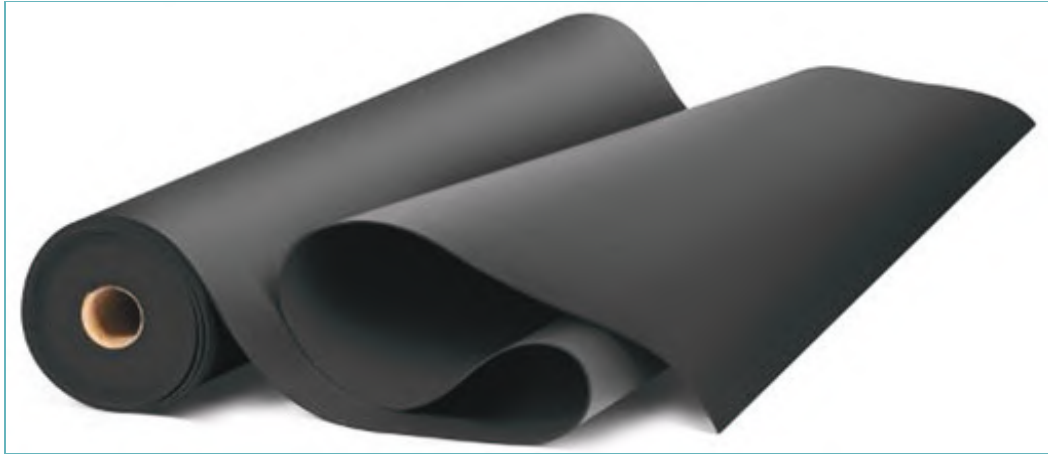

INSTALLATION

- > Tranquil Block can be installed on the concrete or ply surface or wooden/aluminum frame structure. Over Tranquil Block, ply/gypsum should be installed by screwing.
- > In any case of wall/ceiling/floor application, Tranquil Block can be glued, stapled, screwed and can be reinforced and hung like a curtain on concrete/ply surface.
- > Ensure that over Tranquil Block, ply/gypsum should be installed by screwing.

BLOCK : IMAGE 1



BLOCK : IMAGE 2

